


Instruction for Rayman 1x30 Red Dot Scope

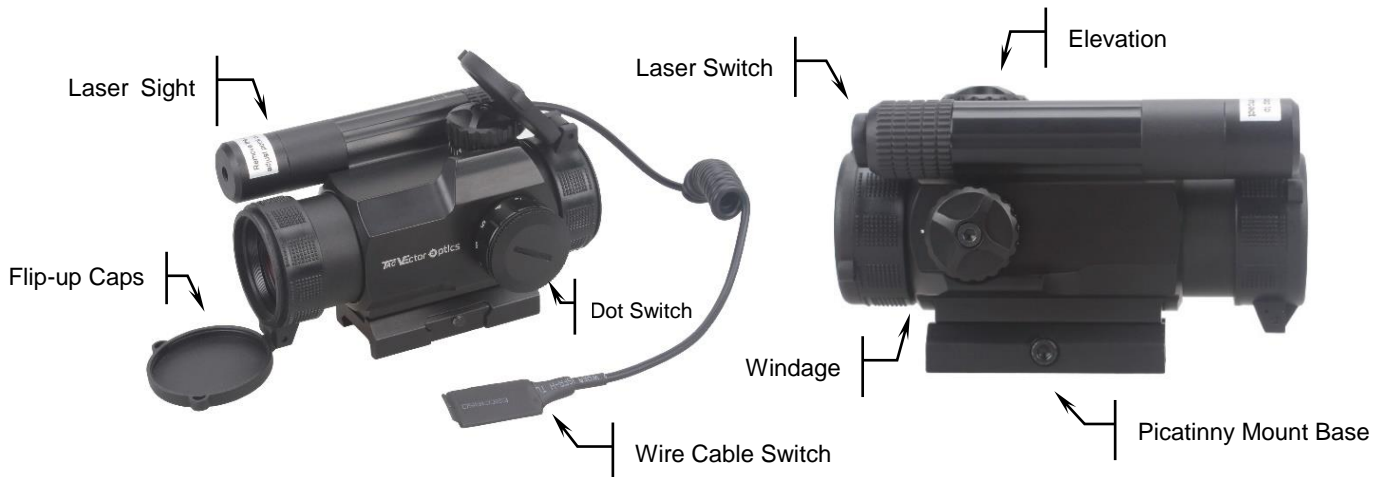

WARNING: NEVER LOOK AT THE SUN THROUGH THE RED DOT SCOPE (OR ANY OTHER OPTICAL INSTRUMENT). IT MAY PERMANENTLY DAMAGE YOUR EYES. MAKE SURE FIREARMS ARE UNLOADED AND POINTED TO THE SAFE DIRECTION.

MOUNTING

The red dot scope is installed on gun by means of picatinny mount. Set the mount onto the rail base so that the rail clamp bolt aligns with the crosscut grooves on your picatinny rail. Work the rail clamp into the rail until the clamping bolts seats onto the rail. Securely tighten the red dot scope by locking screw with a proper tool. Do not over tighten the mounting system. It may damage the red dot scope's mount.

PRECISION ADJUSTMENT

Remove windage and elevation adjustment caps. Before adjust make sure the unit is mounted on the gun on a solid support. Windage is the horizontal (left-to-right) adjustment, usually the side turret of the scope. Elevation is the vertical (up-and-down) adjustment, usually the top turret of the red dot scope.

The red dot scopes feature 1 M.O.A. (1" at 50 yards according to the factory setting) windage and elevation adjustment with audible clicks. Each click of adjustment changes bullet strike at a shooting distance by the amount indicated.

To adjust laser sight windage & elevation, use supplied hex key in the direction you want to move the bullet impact. Each adjustment will affect the point of impact.

BATTERY EXCHANGE

Your red dot scope is powered by one piece of CR2032 button battery for scope and one piece of CR2 battery for laser. Should red dot or laser grow dim or not turn on, you will need to exchange the corresponding battery. To exchange CR2032 battery, release the cap from the battery compartment (dot switch). To exchange CR2 battery, release the cap from the laser switch. Take out the used battery, exchange with a new one in proper direction and fasten the cap again.

ACTIVATE THE RED DOT SCOPE

Turn the illumination knob switch to activate the dot of your scope. 1st level to the weakest and 11th level to the brightest. Subsequently turn the switch will change the dot intensity. Set the knob to zero (0) will turn the scope off.

Press the laser switch to turn on the laser. Press again will turn off the laser.

The laser sight control can be replaced by wire cable switch, press and hold the pad to turn on the laser. Releasing the hold will turn off the laser. **AVOID DIRECT EYE EXPOSURE TO LASER BEAM, OR IT WILL DO SEVERE HARM ON THE EYES.**

MAINTENANCE

Your red dot scope, though amazingly tough, is a precision instrument that deserves reasonable cautious care.

1. When cleaning the lens, first blow away any dirt and dust, or use a soft lens brush. Fingerprints and lubricants can be wiped off with lens tissue, or a soft clean cotton cloth, moistened with lens cleaning fluid.
2. All moving parts of the red dot scope are permanently lubricated. Do not try to lubricate them.
3. No maintenance is needed on the red dot scope's outer surface, except to occasionally wipe off dirt or fingerprints with a soft cloth.
4. Use lens covers whenever convenient.

STORAGE

Avoid storing the red dot scope in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet or a closet is preferable. Never leave the red dot scope where direct sunlight can enter either the objective lens.

Damage may result from the concentration (burning glass effect) of the sun's rays.



FIVE YEARS LIMITED WARRANTY

Your Vector Optics product is warranted free of defects in materials and workmanship for a period of 5 years from time of purchase by the original purchaser. This warranty covers accidental damage, as well as any defects in materials and workmanship. Batteries, damages caused by misuse or improper handling are not covered. In the event of a defect under this warranty, we promise to repair or replace your product and ship it back to you at absolutely free of charge. Also, this warranty is null and void if modification or maintenance is provided by someone other than Vector Optics. This warranty is non-transferable.

For products not directly purchased from us, please contact the local dealer for applicable warranty in.

For more details please visit our website, thanks for your support.

www.vectoroptics.com

