

Instructions for Vector Optics Laser Scope



EYEPiece FOCUSING

The eyepiece is designed to provide a precise fast focus (remove the flip-up cap if covered on ocular lens). The eyepiece will focus faster than your eye can compensate for any inaccuracy in your adjustment.

WA R N I N G: NEVER LOOK AT THE SUN THROUGH THE RIFLESCOPE (OR ANY OTHER OPTICAL INSTRUMENT). IT MAY PERMANENTLY DAMAGE YOUR EYES.

ADJUSTING MAGNIFICATION

Power ring of the scope can be varied by rotating to achieve different magnification.

OBJECTIVE LENS SIZE

The larger the objective lens, the more light that enters the scope, and the brighter the image.


PRECISION ADJUSTMENTS

Windage is the horizontal (left-to-right) adjustment, usually the side turret of the scope. Elevation is the vertical (up-and-down) adjustment, usually the top turret of the scope. The scope features finer windage and elevation adjustments with audible clicks for greater precision.

MOUNTING


The scope is installed on gun by means of mount. It is with normal and quick release mount base that can be installed on weaver or picatinny rail.

To use the quick release mount, first set the level to one side end, install the scope on the rail, release nut for few rounds, use supplied hex key to adjust the screw (as red arrow point) to acquire the proper clip length, fasten the nut again. At last switch the level to the other side end as picture shown. If it's too loose or too tight, just repeat the above steps.

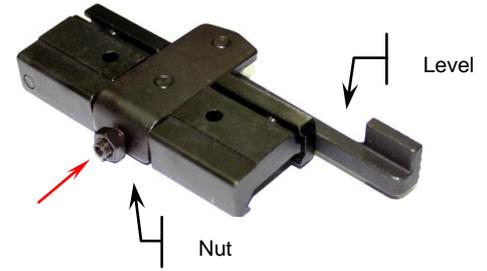

CHANGE BATTERY

To exchange the laser battery please just removes the rear cap. Take away the used batteries and then exchange with one piece of CR2 batteries.

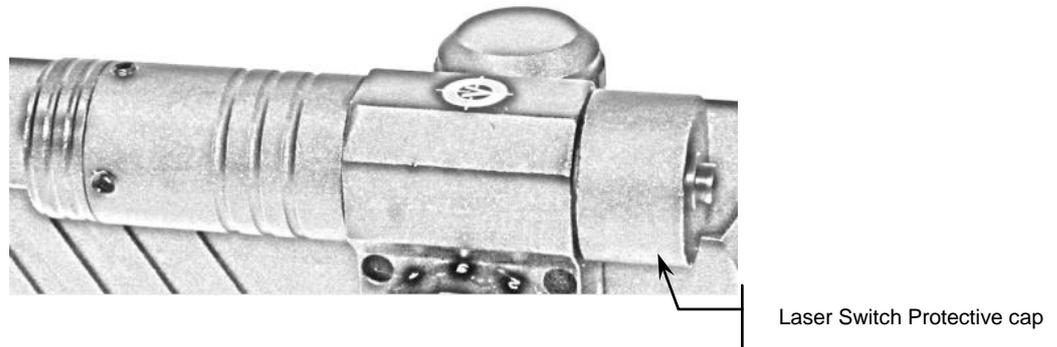

MAINTENANCE

Your riflescope, though amazingly tough, is a precision instrument that deserves reasonable care.

1. When cleaning the lenses, first blow away any dirt and dust, or use a soft lens brush. Fingerprints and lubricants can be wiped off with lens tissue, or a soft clean cotton cloth, moistened with lens cleaning fluid.
2. All moving parts of the scope are permanently lubricated. Do not try to lubricate them.
3. No maintenance is needed on the scope's outer surface, except to occasionally wipe off dirt or fingerprints with a soft cloth.
4. Use lens covers whenever convenient.

STORAGE

Avoid storing the scope in hot places, such as the passenger compartments of vehicles on hot days. The high temperatures could adversely affect the lubricants and sealants. A vehicle's trunk, a gun cabinet or a closet is preferable. Never leave the scope where direct sunlight can enter either the objective or the eyepiece lens. Damage may result from the concentration (burning glass effect) of the sun's rays.

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

TACVector Optics

www.scvector.biz www.vectoroptics.com

